Wireless Mouse

Wireless Optical Mouse

RF 2.4 GHz wireless solution.

User Manual

FEDERAL COMMUNICATIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must accept any interference received, including that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in particular installation if this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

Features

1. RF 2.4 GHz wireless solution.
2. Device is rechargeable.
3. Additional 4th button, which is the "Back" or "Previous Page" function for the Internet or file browser.

Package Content

1. Wireless Optical Mouse
2.Receiver
3. Rechargeable Cable
4. User Manual

System Requirement

1. IBM-Compatible PC
2. Microsoft Windows 2000/ME/XP
3. Available USB port

Installation

1 Connect the Receiver to Your Computer

- Please insert the mini USB receiver / dongle into the available USB port.

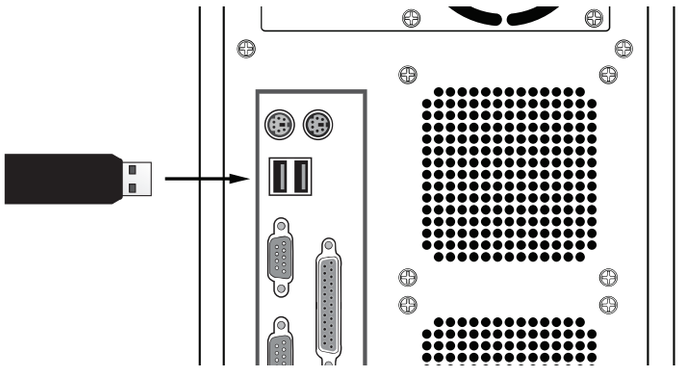

2 Insert the Batteries

- Simply open the lid, which is located on the bottom surface of the device.
- Insert 2 triple A batteries into the battery tray. Please make sure that the batteries were inserted correctly before closing the battery lid.

3 Connection Setup

- Simply press the LED/connect button on the mini USB receiver dongle.

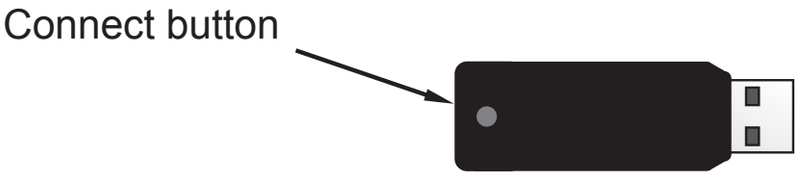

- Then, press the connect button on the bottom surface of the mouse to establish the wireless connection.

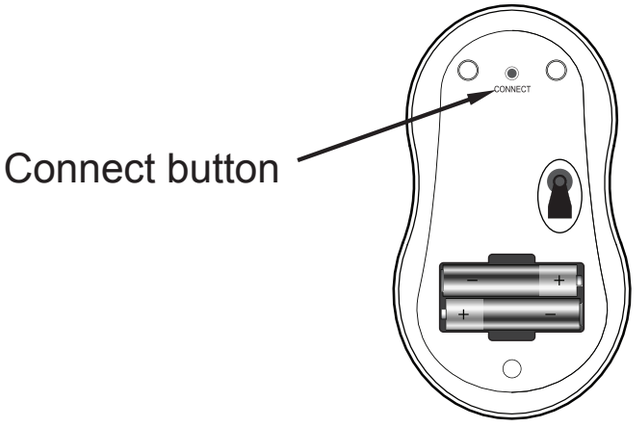

4 Test the Mouse

- Simply move around the mouse. If the LED signal on the mini receiver flashes while moving the device, the connection has been established successfully. Otherwise, the connection has been failed to establish. Please retry the connection setup step if the connection has been failed to establish.

5 Charge the Mouse

- The device uses Ni-MH rechargeable batteries. Therefore please charge the device for at least 8 hours prior to the first time use to avoid power leaking. To charge the mouse, please plug in the connector of pin point cable into the front end of the mouse, and plug in the other side of the connector to the side of the mini receiver. You may unplug the cable when the charging signal on the mini receiver switches off.

Attention:

The device should be charged when the mouse cursor is not moving smoothly and the device is used in proper distance.

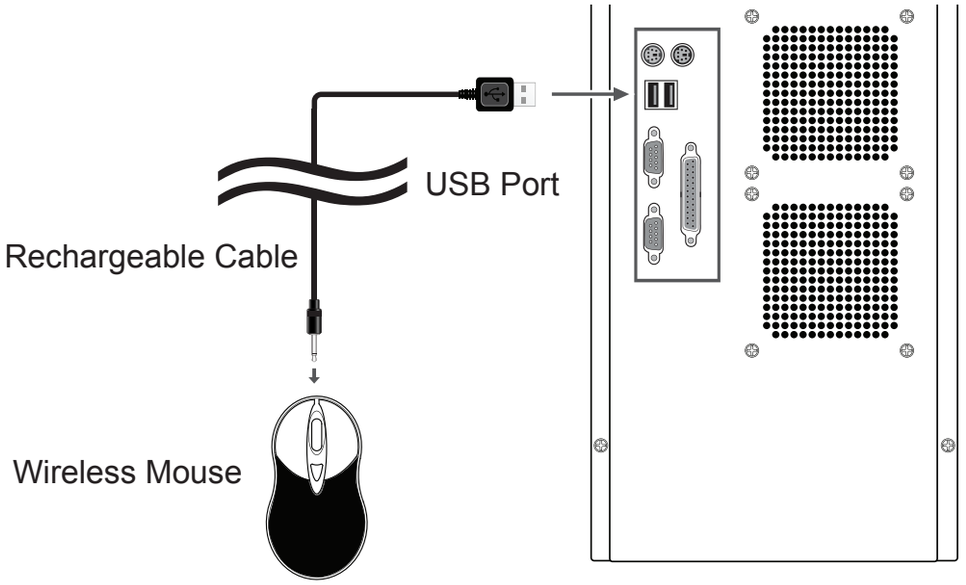

- The mouse will turn into sleep mode when the device has been idling for a while. Please simply press any mouse button to resume operation.
- For maximum performance, please make sure the batteries were charged for at least 8 hours prior to the first time use.
- Please use only Ni-MH rechargeable batteries. Using non-rechargeable batteries for recharging purpose may severely damage the device.
- Please connect the cable of the mini receiver directly to the main frame to ensure the best connection quality.
- Please redo the connection setup step each time when the batteries are replaced, or when the receiver cable has been re plug into the system.

Resolving Basic Problems

- If your mouse cursor is operated by another system in multi-user environment, please unload the batteries. After 2 minutes, please reinsert the batteries, and repeat connection setup step.
- Using the device on top of metallic table or desk may give negative impact.
- If your device is not functioning smoothly, you may try the followings to help resolve the problem.
    a. Recharge the batteries, or replace the batteries.
    b. Repeat the Connection Setup step.
    c. Shorten the operation distance by moving the mouse closer to the receiver.

Wireless Optical Mouse 800 DPI